

Installation of body-mounted filter for Canon full frame camera



1. Loosen the two screws of the viewfinder cover using the supplied precision screwdriver.




2. Remove the cover. Keep the screws and cover in a storage bag.



3. Select the mirror lockup item in the menu and press the shutter button to move the mirror up.




4. Insert a filter while pushing the long edge into the back of the mirror.

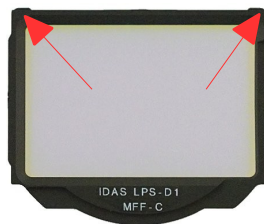

5. Press the filter frame down.



Note :

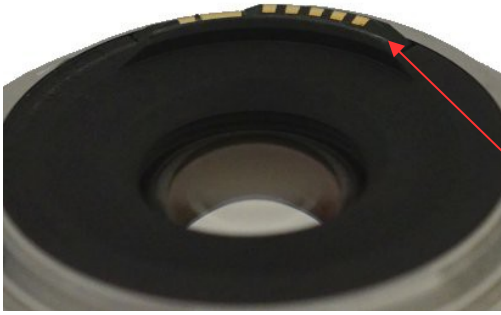

The filter is kept pressed into the lens guard when is is set in place properly. The frame surface might show some wear due to contact with the lens bayonet but the filter glass itself is not affected at all.