


Installation of IDAS Filter Adapter for Baader Filter Holders

This document describes the procedure for mounting an IDAS 2.5 mm thick filter into a Baader slide-in filter holder using an adapter supplied by Hutech. Note: when handling the filter, use [disposable finger cots](#) or gloves to avoid contaminating the filter glass.

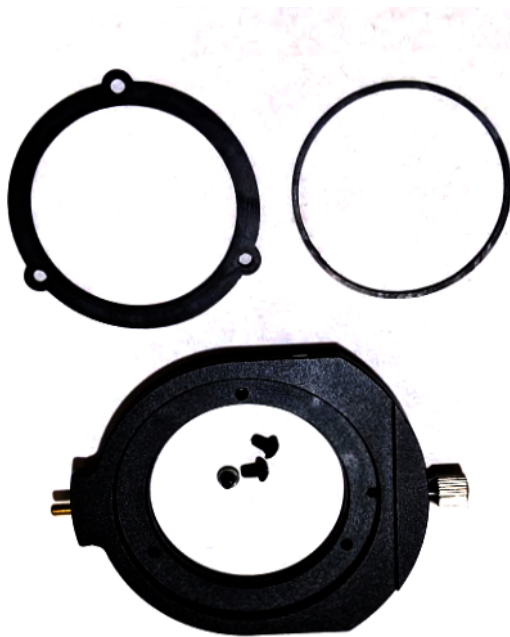


The filter adapter consists of two parts:

- The lower filter gasket (thin ring)
- The upper retaining ring which has 3 ears and screw holes.

The baader filter holder should include 3 small screws to hold the filter in place

First, set the lower filter gasket into the Baader filter holder cavity. When centered, it should fit on the inner lip of the filter holder cavity.

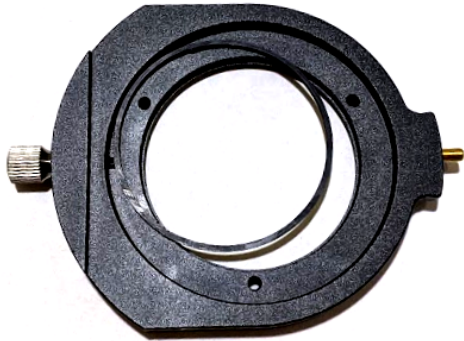

Next, set the IDAS filter onto the gasket placed inside the Baader holder cavity.



Finally, place the upper retaining ring onto the filter, taking care to set the side with the recess for the filter against the filter. Rotate the retaining ring to align the screw holes with the holes in the Baader holder, and add the 3 retaining screws. The screws should not be over-tightened or the retaining ring will deform and not properly rest on the filter glass.

